INSTALLATION GUIDE:
CONCRETE ABOVE COUNTER BASIN

Installation of this product should be carried out by a licensed plumber. This document is provided as a general installation guide. Installations in Australia and New Zealand need to adhere to AS/NZS 3500 to ensure compliance with building/plumbing standards.

THE FOLLOWING INSTALLATION GUIDE IS SUITABLE FOR
THE **COMET, ECLIPSE, VENUS, TITAN, CRESCENT, LYRA, ASTRA** & **NOVA** CONCRETE BASIN

01 BEFORE INSTALLING THE BASIN


Do not place tools, mixers, wastes and taps in or near the basin.

Make sure that the under side of the basin and the benchtop are free of dust and debris so that the silicone can adhere properly to the surface.

02 CRITICAL: APPLY <u>TWO RINGS</u> OF SILICONE

Applying two continuous rings of silicone (no gaps) is mandatory.

Use a flexible bathroom silicone.

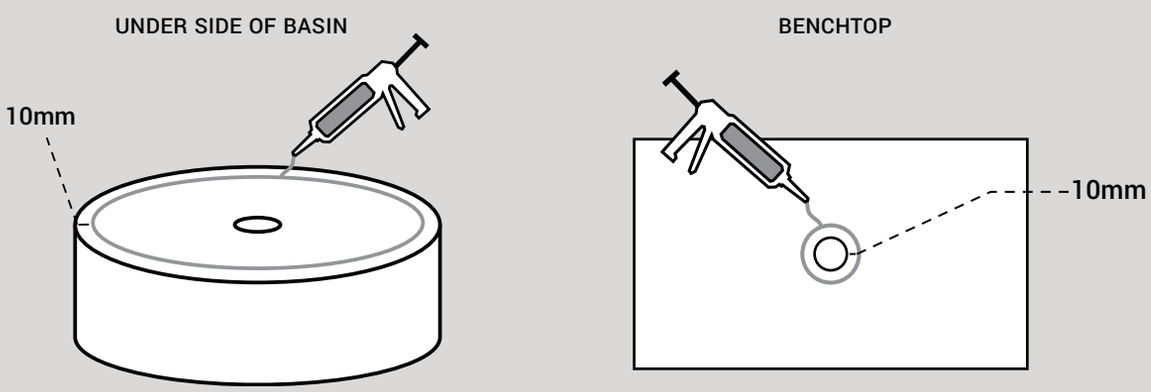

On the **under side of the basin**, run one **continuous ring (no gaps)** of silicone 10mm in from the outer edge.

On **your benchtop**, run one **continuous ring (no gaps)** of silicone 10mm in from the edge of the waste hole cored in benchtop.

03 PRESS BASIN DOWN ON BENCH


Align the basin with the waste hole and press it onto the benchtop. Wipe away any excess silicone with a damp cloth.

04 INSTALL WASTE

DO NOT USE AN <u>OVERFLOW</u> WASTE

ONLY HAND TIGHTEN WASTE

Follow your waste manufacturer's installation guide.
Ensure the waste is fitted correctly, so it doesn't leak.

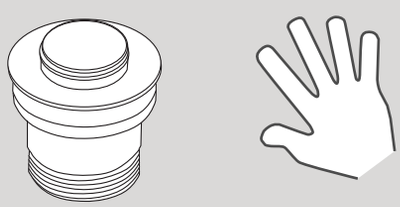

blend. CONCRETE DESIGN

FAILURE TO INSTALL THE BASIN IN ACCORDANCE WITH BLEND'S INSTALLATION GUIDE VOIDS THE WARRANTY

*All dimensions and weights are estimated. Due to the nature of concrete, there may be slight variation in colour, finish and weight. Do not scale drawing.